

FM Radio Product Manual
Manuel du produit Radio FM
Radio FM Manual del producto
FM Radio Produkthandbuch
Manuale del prodotto Radio FM
Руководство по эксплуатации FM-радиоприемника
FMラジオ操作説明書
FM 라디오 작동 지침

20250625




EN4 0 3 5

EN	English	1-4
FR	Français	5-9
ES	Español	10-14
DE	Deutsch	15-19
IT	Italiana	20-24
RU	Русский	25-29
JP	日本語	30-33
KR	한국어	34-37

Product Diagram

EN

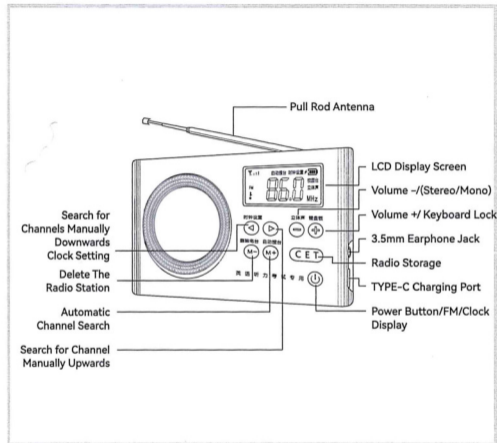

⚠ This manual is a general manual, please refer to the physical object, some do not have the function please ignore.

Operation Instruction

- 1. Battery Model (C7PRO) Power Supply Method:** Open the battery compartment and install two AAA batteries at the designated positive and negative terminals. (when not in use for a long time, remove the batteries and store them separately)
- 2. Rechargeable Model (C5S) Power Supply Method:** It is powered by a built-in 18650 lithium battery. If the battery is low, it can be charged by connecting to the TYPE-C port of the radio.
- 3. Power on/Off:** Press and hold the power button for 3 seconds to turn on the device. Press and hold it again to display the time. Press and hold it short again to turn it off.
- 4. Automatic Station Search:** When the device is turned on, press and hold the "M+" key for 3 seconds to automatically search for stations (50-115 MHz) upwards and automatically store all the stations found. After the search is completed, the first station is read by default. Press and hold the "M+" key briefly again to read the next station.
- 5. Manual Search:** Long press the "▶" key to search for radio stations upwards; Press and hold the "◀" key down to search for radio stations, and the search will stop automatically.
- 6. Fine-tune the Frequency:** Press the "▶" or "◀" keys up or down to fine-tune the frequency.
- 7. Volume Adjustment:** Press the "+" or "-" keys briefly to increase or decrease the volume.
- 8. Radio Access:** Switch to the frequency of the exam, press and hold the "CET" key to store the current radio station. When storing the radio station again, the system will automatically overwrite the previous one. Press the "CET" key briefly to read the stored radio station. When accessing the radio station, the screen will display the stored radio station frequency.
- 9. Stereo/Mono Switch:** Press and hold the "-" key, and the screen will display "Stereo". Press and hold it again to switch to Mono.

10. Keyboard Lock: In FM mode, hold down the "+" key and the screen will display "⏸" to lock the keyboard; Long press again to unlock.

11. Clock: ① Clock display: When the device is turned off or on, press the power button briefly to display the time on the screen. ② Clock setting: When the device is off, to display the clock, press and hold the "◀" key for 2 seconds to start flashing the hour numbers on the screen. Press and hold the "◀" key briefly again to start flashing the minute numbers. When the numbers start flashing, press and hold the "+" or "-" key briefly again to adjust the clock.

12. Antenna Usage: When using a radio, you need to pull out the telescopic antenna to achieve the strongest signal.

13. Earphone Function: Supports small wired earphones with a 3.5mm jack. Due to the different standards of small earphones from various manufacturers, there may be some incompatibility issues. (Wired earphones need to be purchased separately.)

14. USB Power Supply: Use a 5V1A adapter or power bank to connect the TYPE-C power cord for power supply. (Only for reference of C5S model. The power cord needs to be provided separately. When powered by USB, the battery needs to be removed.)

Technical Parameters

Rechargeable Mode (C5S)

Frequency Range: FM 50-115MHz

Charging Input: DC5V/500mA

Charging Interface: Type-C

Bluetooth Connection: Not supported

Battery Model (C7PRO)

Frequency Range: FM 50-115MHz

Power Supply Mode: Two AAA batteries (No. 7)

Bluetooth Connection: Not supported

Common Problems and Solutions

Failure to power on :

- Whether the positive and negative terminals of the battery are installed in reverse.
- Whether the battery is fully charged.

Noise issue :

1. Please pull out the telescopic antenna to check if the screen signal shows full capacity. 2. Turn the radio direction to a clear position.

Power supply method:

The radio is available in two models: battery-powered model (C7PRO) and rechargeable model (C5S).

Battery Model(C7PRO): Only AAA batteries can be used for power supply (the charging port of this model does not have charging function).


Rechargeable Model(C5S): It can be charged by connecting a TYPE-C charging cable to the radio's interface, it cannot be used with AAA batteries.

To unlock the keyboard: Press and hold the "+" key, the "⚡" icon disappears and the keyboard is unlocked.

Warning

1. Please use DC 5V charger to avoid damage to your radio.
2. Do not disassemble or modify the headset or radio for any reason, otherwise it may lead to malfunctioning or burning of the headset, electronic breakdown or even complete damage to the product.
3. This product has a built-in rechargeable lithium-ion battery, which is prohibited from disassembling, loading, squeezing or putting into fire. If there is a serious bulge, please do not continue to use.
4. If the rechargeable model radio turns off automatically due to insufficient power, please charge it in time within 30 days after the power is turned off, such as overtime without charging in time may lead to it can not be charged properly. If the battery model radio is not used for 7 days, please remove the battery to avoid liquid leakage and damage to the product.
5. Do not place the device in an environment where the temperature is too low or too high (below -20°C or above 45°C).
6. Do not use the product in flammable and explosive environments (e.g. petrol stations, gas stations, steam rooms, etc.) or under thunderstorms.
7. Due to the different environments in which the radio is used, charging time and usage time may vary depending on usage.

Schéma du Produit

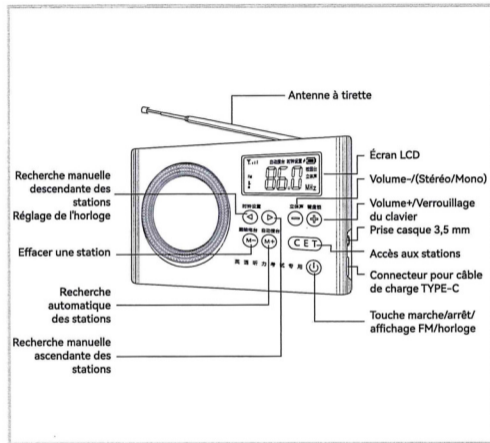

Les instructions sont générales, se rapportent SVP aux produits réels, ignorent SVP les fonctions qui n'ont pas.